OPL Hotspot Guide





Hotspot Kit - Materials List and Costs

Mobile Hotspot \$290	ZTE
AC Adapter \$25	
Travel Bag \$25	

Rocket Hub Mobile Hotspot

Top



Bottom



Wi-Fi Password

Back



Power on/off

AC adapter insert

Mobile Hotspot Indicator Lights

The lights found along the top of the Mobile Hotspot unit each indicate important information about the status of the device. See the chart below:



Indicator	State	Description
1. Power	Green steady	On AC power
(¹)	Green blinking	On battery power
	Off	No power
2. Voicemail	N/A	STAFF USE ONLY
3. Wi-Fi	Green steady	Wi-Fi on, no data transferring
	Green flickering	Wi-Fi on, data transferring
7	Off	Wi-Fi off - contact Library
4. Information	N/A	STAFF USE ONLY
5. Battery	Green steady	More than 50% battery power
	Yellow steady	20% - 50% battery power
	Red blinking	Less than 20% battery power
	Off	No battery power
6. Signal Strength	Green steady	Connected to LTE network
Ψ ₋ πΠ	Red steady	No service / limited service
	Red blinking	Error - contact Library

Mobile Hotspot - Getting Started

Starting up mobile Hotspot

- 1. Plug AC Adapter into Mobile Hotspot.
- 2. Plug cable into electrical outlet.
- 3. Turn switch ON at back of unit.
- 4. Allow up to 5 minutes for connection.
- 5. When **Wi-Fi light** and **Signal Strength** are both on, you should be able to connect your device.

AC adapter insert







Connecting to Hotspot With Personal Device

- 1. Ensure Mobile Hotspot is active (see steps above).
- 2. Power up device and check Wi-Fi connection settings.
- 3. See underside of Mobile Hotspot for login information.
- 4. Select OPL Hotspot Network.
- 5. Enter Wi-Fi network password.

